

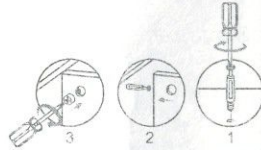
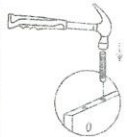


LE 120

CT-1200-OP01

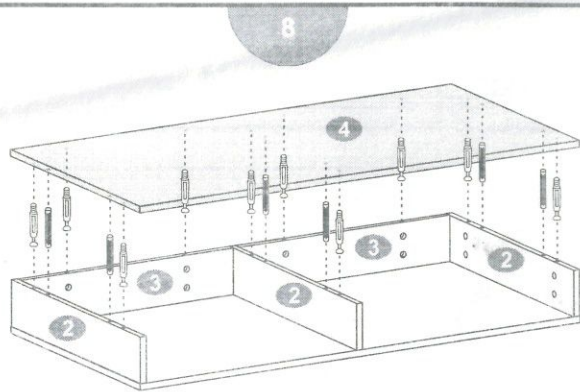

B 8X40MM  6PCS **A** 6X40MM   10SETS

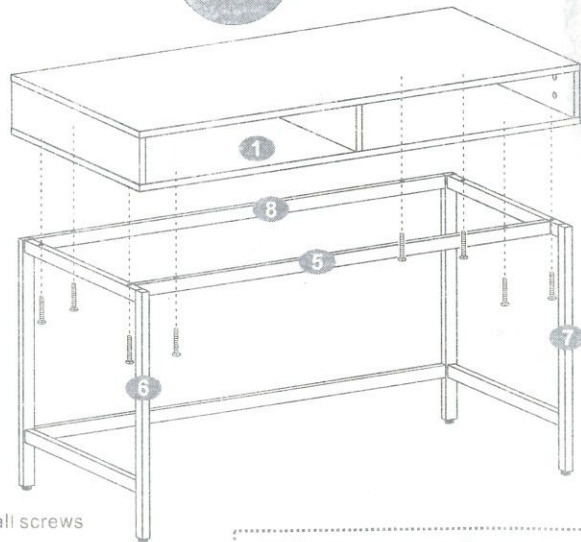

Attention: Please tighten all screws and adjust the leveler  after all the steps.

C 6X40MM  8PCS

P.8

CT-1200-OP01 Computer Desk

ASSEMBLY INSTRUCTION



Thanks for purchasing one of our products, please read carefully the assembly instructions before the installation (Attention: Do not tighten the screws before all screws are in place).




General Care:

-Keep your furniture out direct sunlight-Use desk pads and coasters to protect the surface from dents, scratches, and moisture from hot or cold liquids.

Cleaning:

-For cleaning, wipe the surface with a damp (not wet) cloth or wipe dry with a clean lint free cotton cloth.
-Window cleaning liquid or a similar cleaning liquid can be used to clean glass surface.


■ Part List

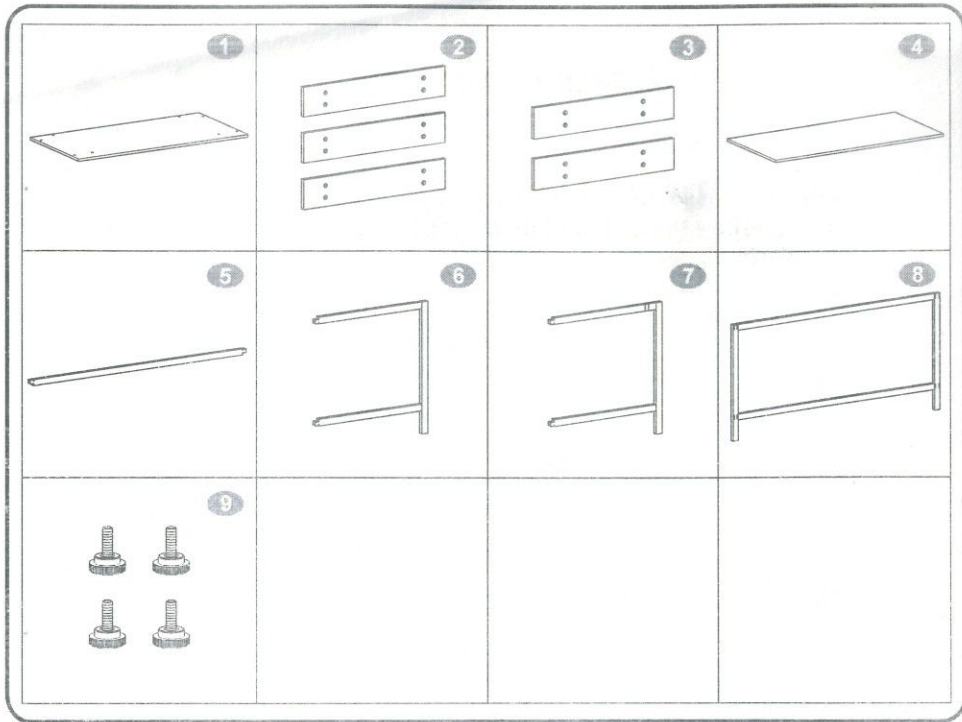


■ Screw List

PART	SIZE		QTY	PART	SIZE		QTY
A	6X40MM		20	C	6X40MM		8
B	8X40MM		12				1

■ Tools Needed





■ 6X40MM Bolt Installation As Below:

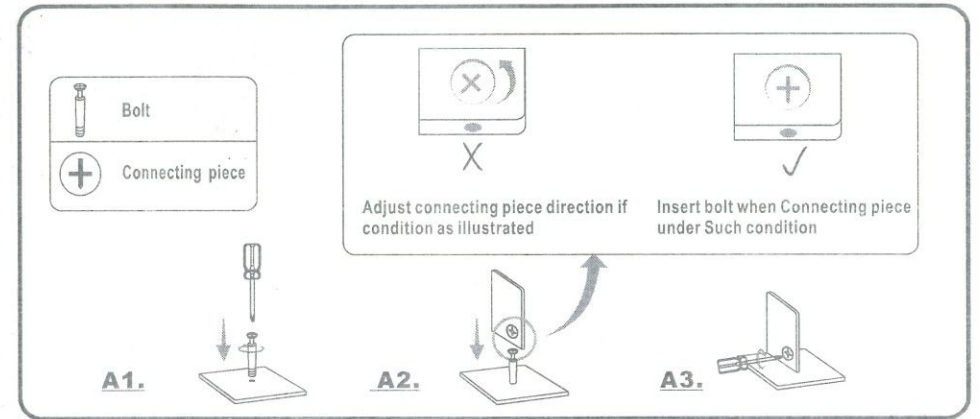


■ 8X40MM Wooden Dowel Installation As Below:



■ Assembly Steps

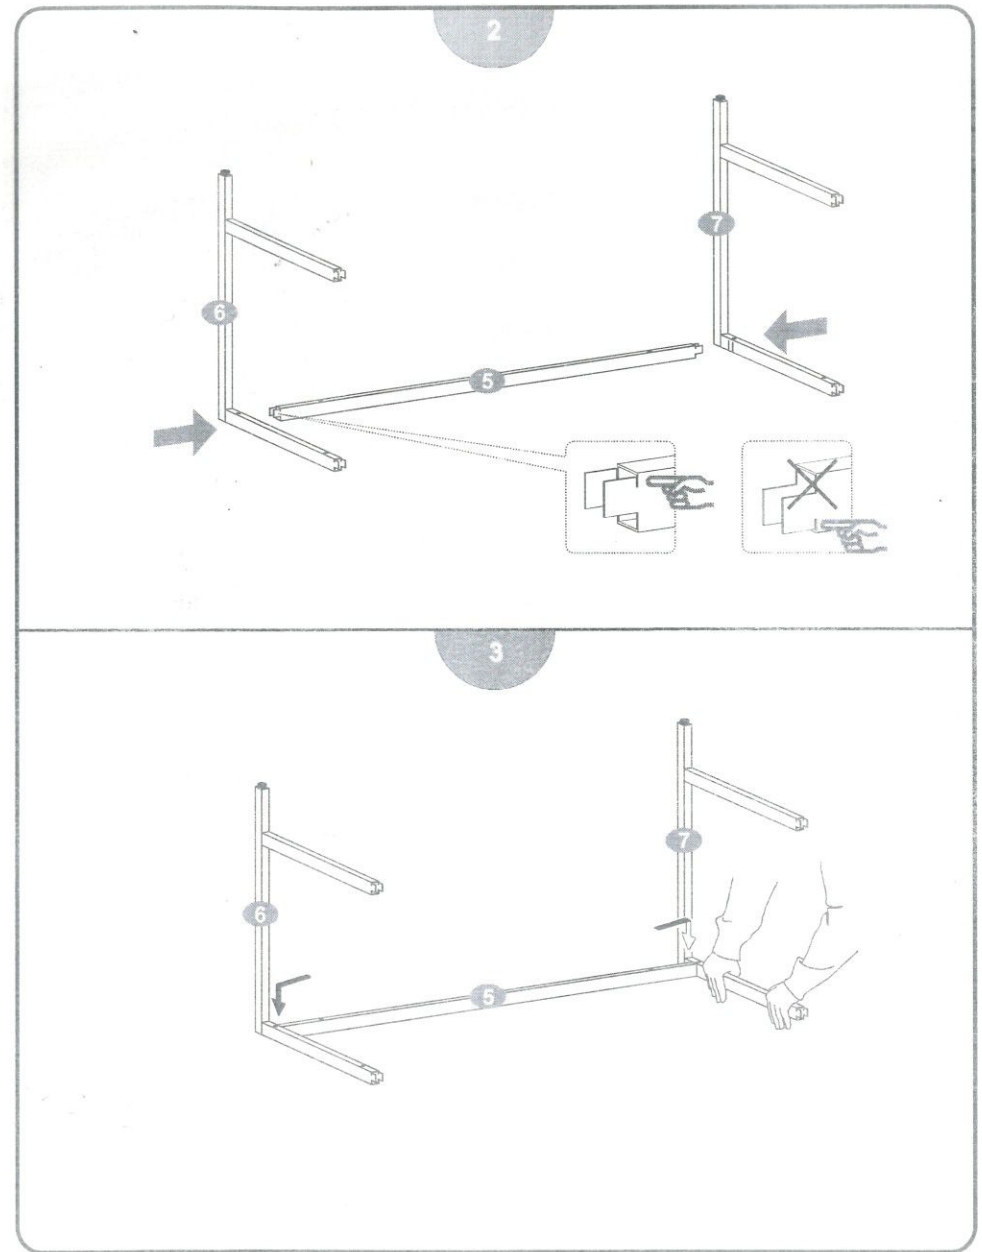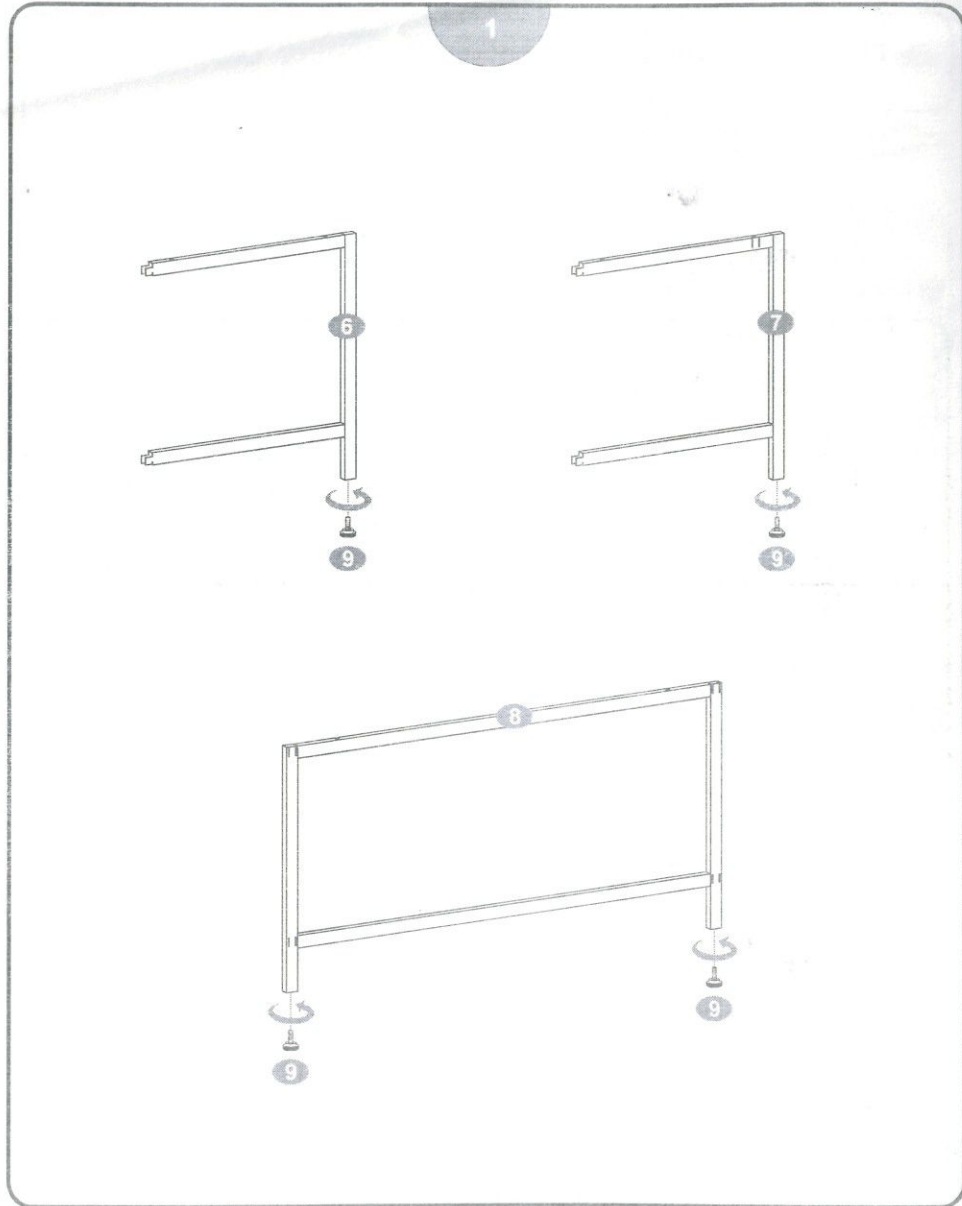


CT-1200-OP01

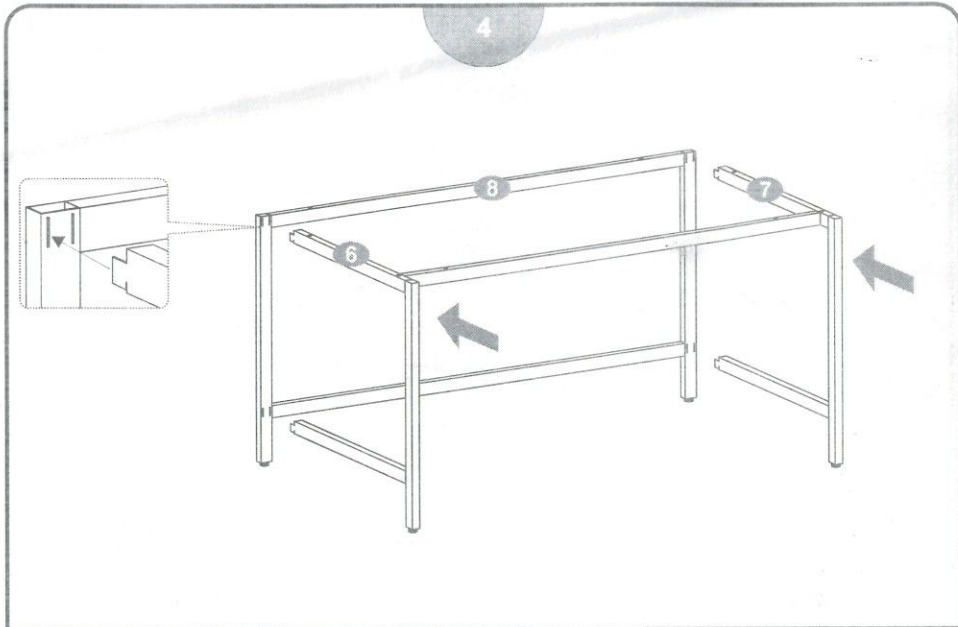


P.6

CT-1200-OP01

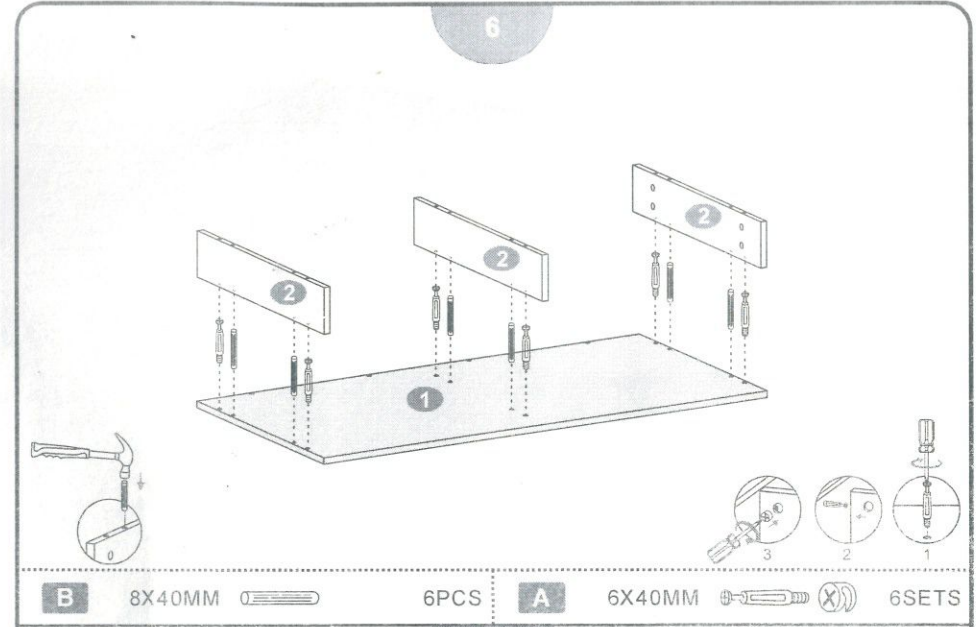

B 8X40MM 6PCS **A** 6X40MM 6SETS

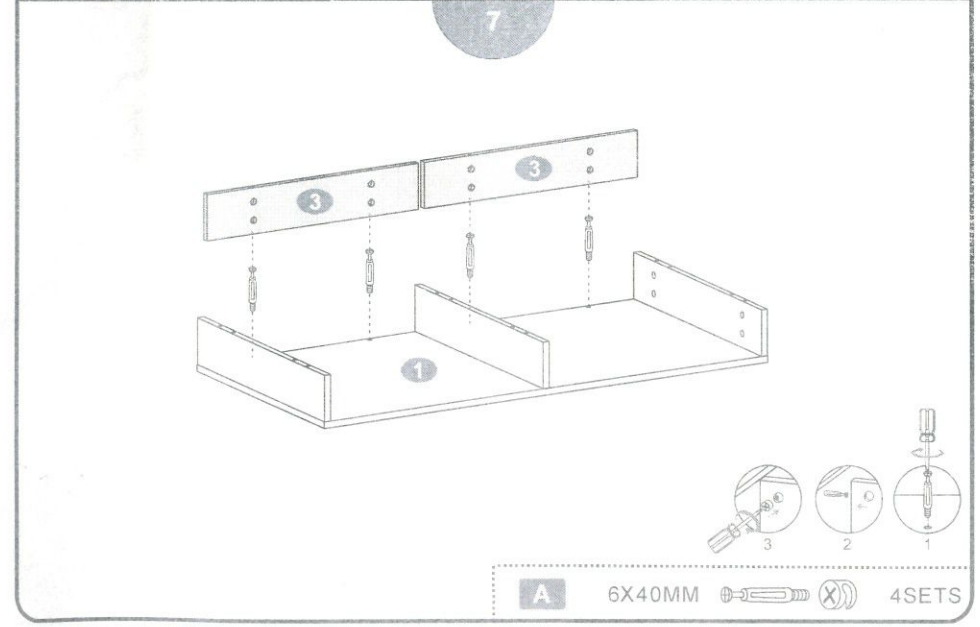

A 6X40MM 4SETS

P.7